

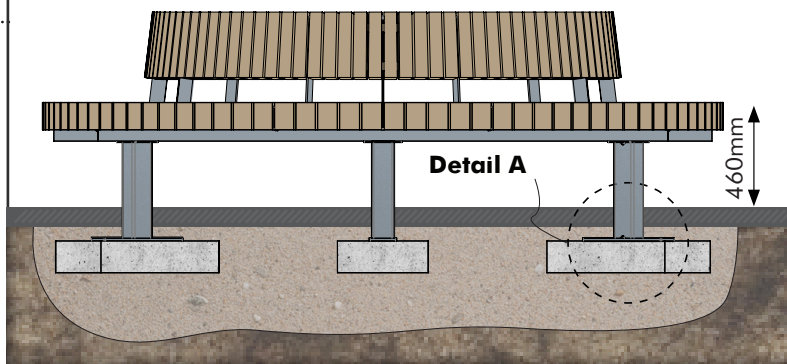
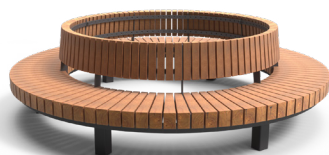


INSTALLATION INSTRUCTION

Tree bench Plane with backrest

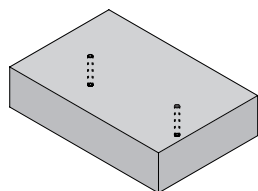

Detail A

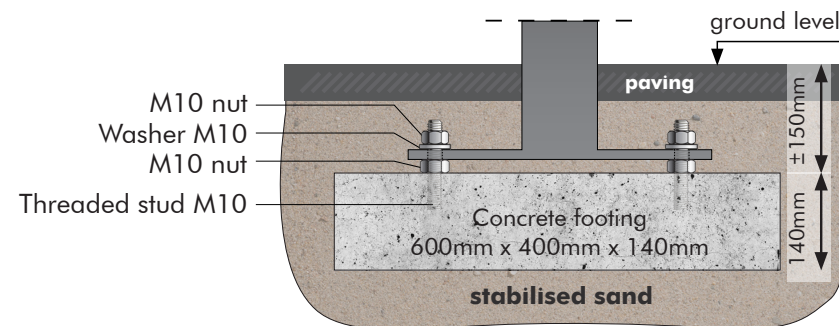


Concrete block:

600mm x 400mm x 140mm
with screw sleeve M12
centre-to-centre distance 350mm

Caution!

1. If the location of the bench has a slope, determine then in the middle of the bench the correct seat height.
2. Place a lifting sling under the concrete base to position the bench. Do not move the bench by lifting it lifting it by the seat or backrest.

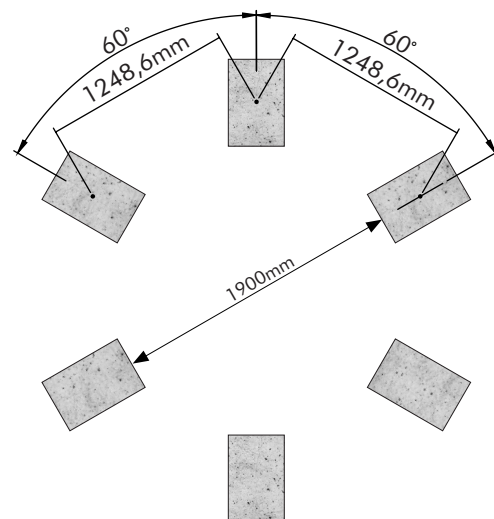

Diameter: 3000mm

