

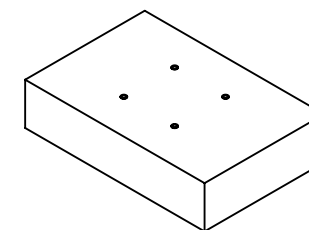
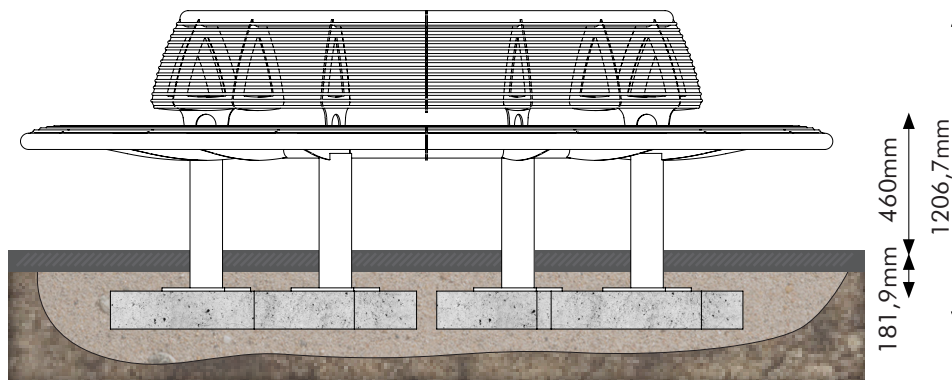


Treebench Wenters with backrest (3000mm)

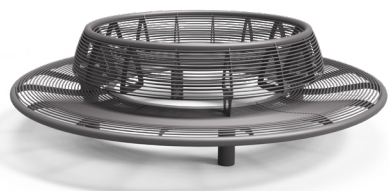


Concrete block:

600mm x 400mm x 140mm
with screw sleeve M12 centre-to-centre
distance 170mm

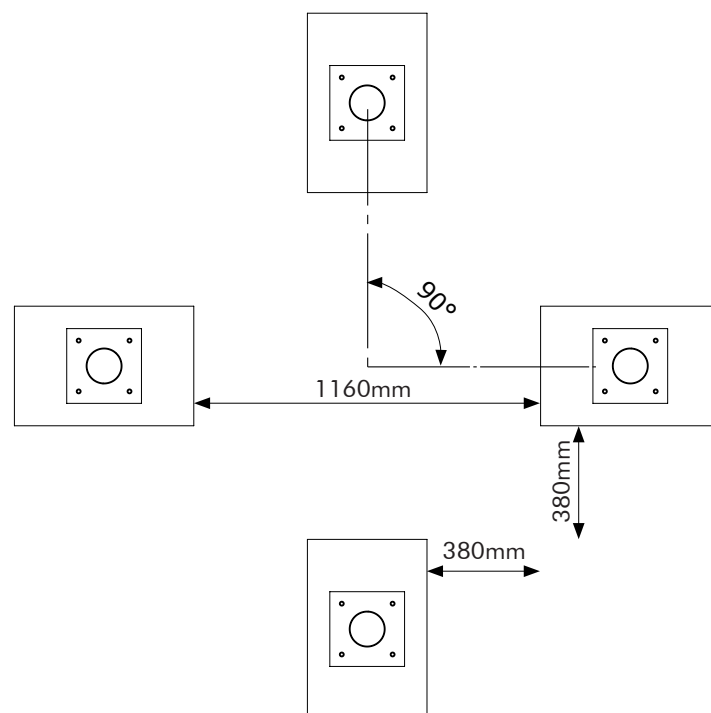

Diameter: 3000mm

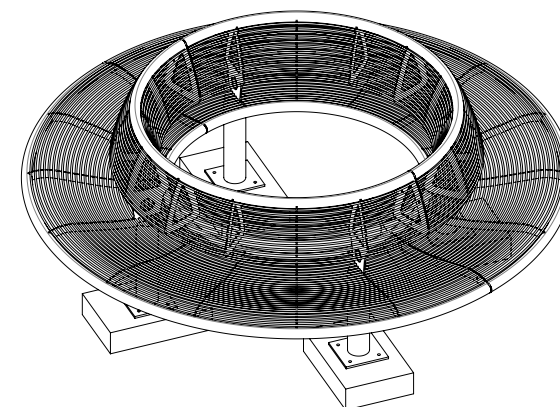

Caution!

1. If the location of the bench has a slope, determine then in the middle of the bench the correct seat height.
2. Place a lifting sling under the concrete base to position the bench. Do not move the bench by lifting it by the seat or backrest.