

INSTALLATION & PLACEMENT INSTRUCTIONS



Step 1: Attach the base plate to the screw pile. (The top of the screw pile should be approximately 500 mm below ground level.)

Step 2: Install the top cap. (See Sheet 2.)

Step 3: Install the birdhouse. (See Sheet 2.)


Step 4: Thread the leveling nuts onto the threaded rods and adjust them until they are level. (See Detail A.)

Step 5: Position the green post over the threaded rods onto the leveling nuts and secure it in place.


Step 6: Install the retaining walls. (See Sheet 3.)

Step 7: Backfill with sand and install the paving.

Green stand

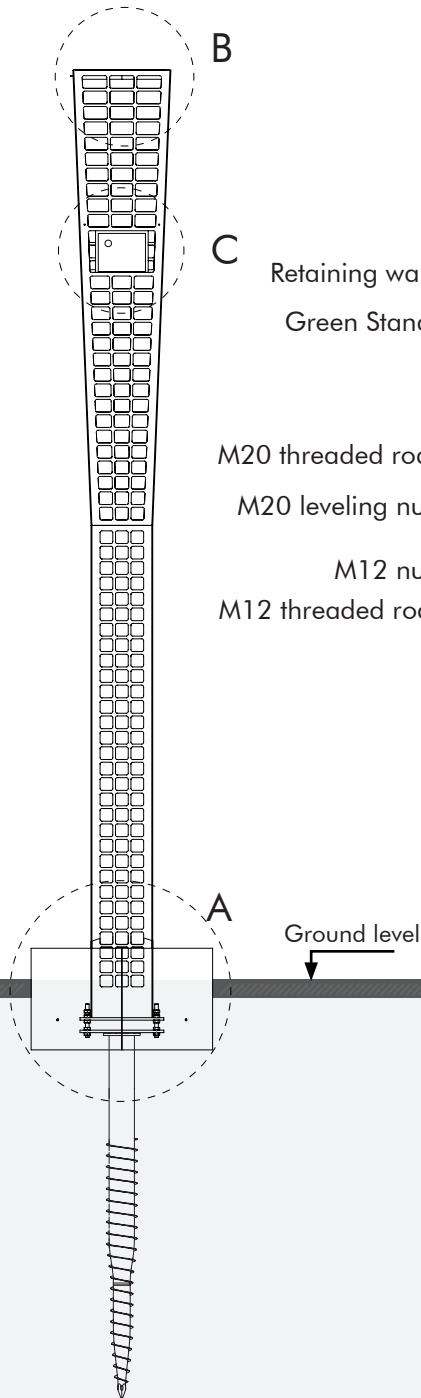


Detail A

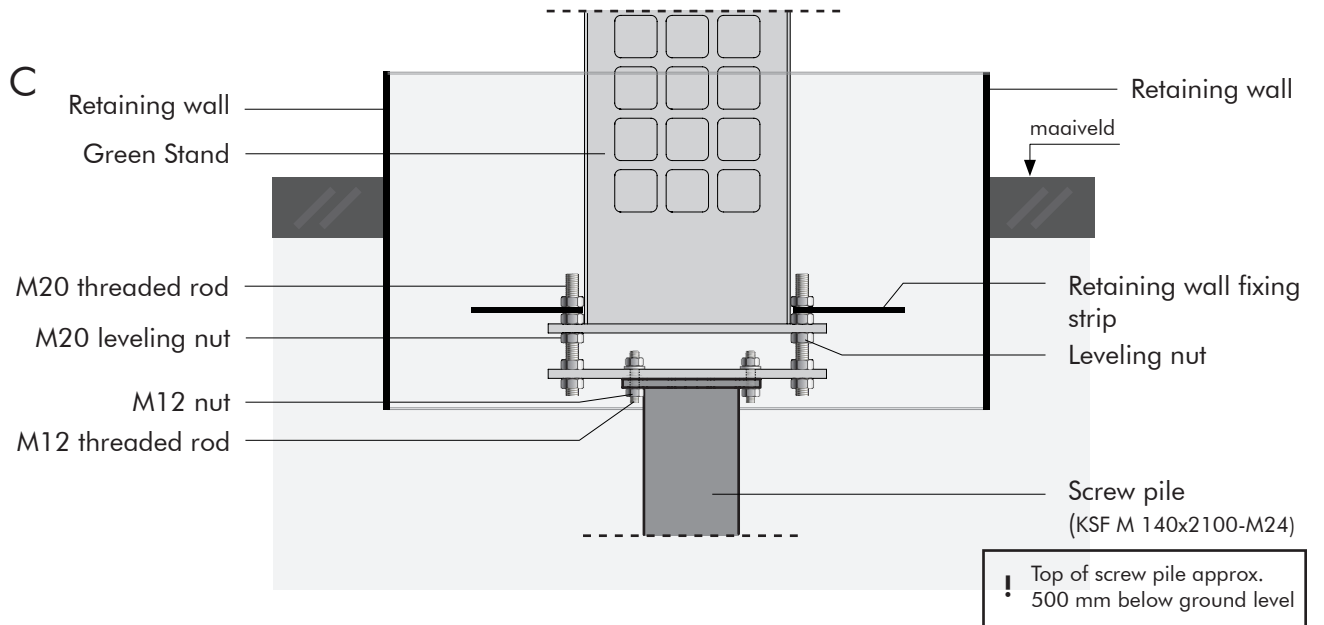

Green stand

Detail B (Top Cap Fixing)

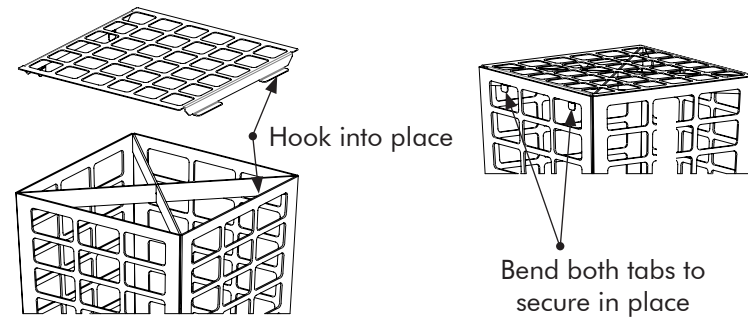


Detail C (Birdhouse Fixing)

Place the birdhouse into the recess in the green post. Secure it using the supplied mounting strip (1).


Drill the fixing holes at the location of the mounting strip and fasten it using the supplied fixing hardware.

(Mounting strip to be installed on the inside of the green post.)

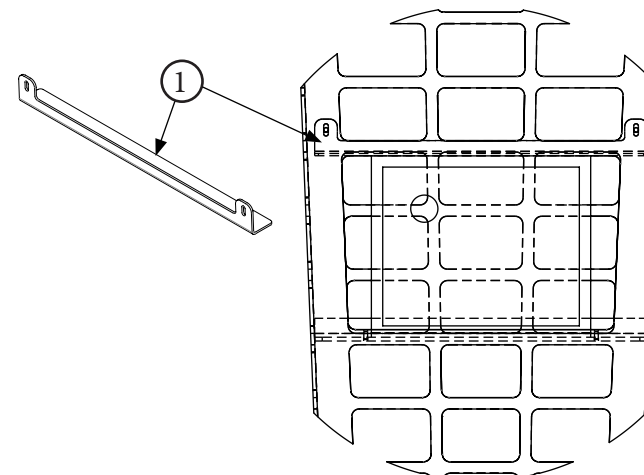

Green stand

Place the retaining walls on both sides of the green post by sliding the retaining wall fixing strips over the threaded rods and then securing them in place.

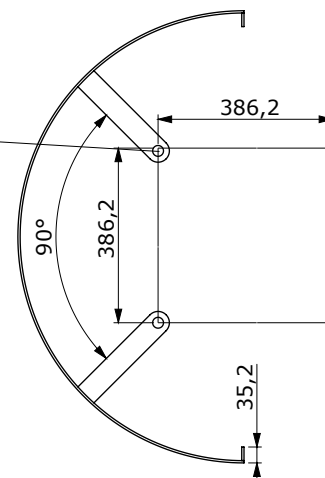

Connect the two retaining walls using the supplied fixing hardware.

